



GENERAL NOTES:

1. INSTALLATION INSTRUCTIONS ARE PROVIDED WITH EACH TANK.
2. ALL DIMENSIONS ARE APPROXIMATE AND FOR INFORMATION ONLY.
3. SITE FOUNDATIONS TO ACCOMMODATE WEIGHT OF TANK PLUS CONTENTS.
4. ALLOW 600mm TO OPEN HINGE LID.